


# JOINING BUCKLE

Used for Joining Horserail®, Hottop® and Hottop®Plus

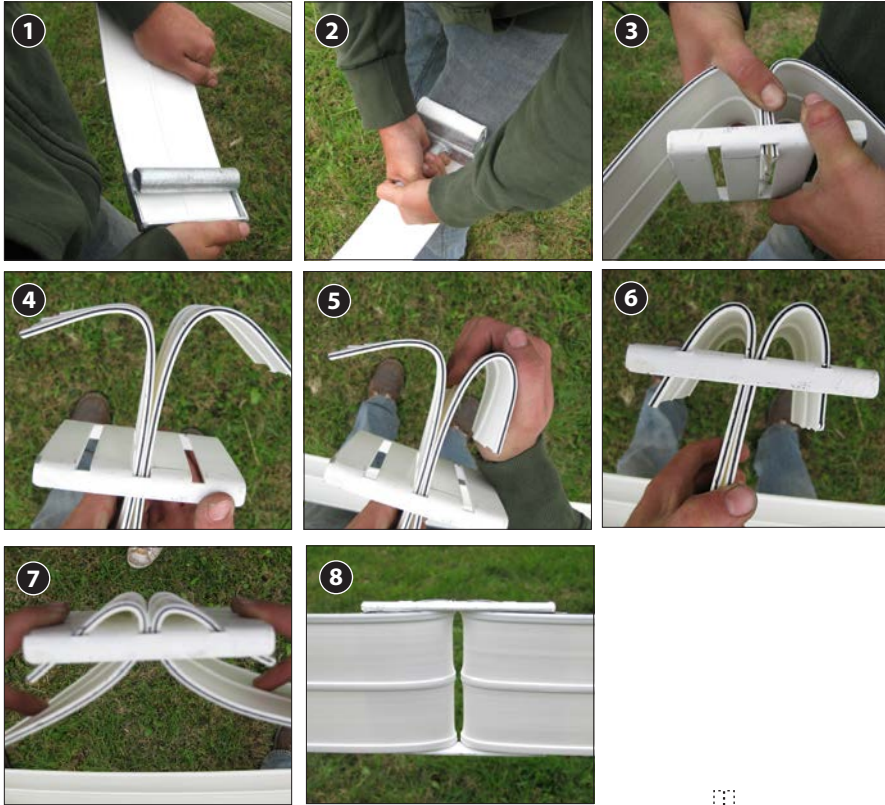

- 1 Insert end of rail into the Bending Tool all the way so rail touches the back rim of the tool.
- 2 Bend the rail - the Bending Tool will create the optimum shape and length for inserting rail into the Joining Buckle.
- 3 With ribs of the Joining Buckle facing you, insert both ends of the pre-bent rail through the middle slot. (see Diagram B)
- Note: Make sure you have the Joining Buckle facing the proper direction! (see Diagram E)
- 4 Pull enough rail through the slot to allow you to further manipulate the rail ends.
- 5 Hand bend the ends to be close to parallel to the rail.
- 6 Insert each end into the appropriate outside slots. Pull/push both rails down through the slots as much as possible. (see Diagrams C and D)
- 7 With your thumbs resting on the outer edges of the Buckle - press down on the Buckle, while at the same time, putting pressure on the rail. Trying to make the assembly as "flat" as possible.
- 8 The joined assembly will flatten out during final tensioning. This view is from the rail side of the fence!

## Horserail® Products

### • Joining Buckle

- Colors: Brown, Black & White



### Horserail®

 
- Sizes: 4.25" and 5.25" and 6.25"  
(108mm, 133mm and 159mm)

### Hottop® & Hottop®Plus

- Sizes: 4.25" and 5.25"  
(108mm and 133mm)

### • Bending Tool

- Match size of rail



## Other Related PDF Sheets

### • How to Cut Rail

For More Details,  
Tips & Techniques on  
Building Fences,  
Please visit our website:

