


JOINING BUCKLE FOR COATED WIRE

Procedures are the same for Hotcote® and Horsecote®

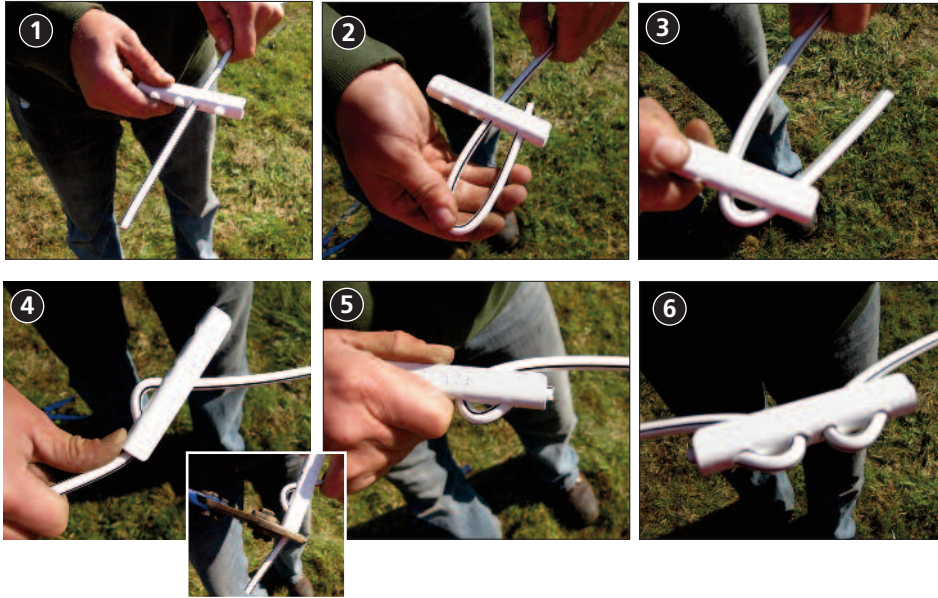

Joining Buckle Installation Instructions

- Use the Joining Buckle to connect two coated wires together without the need to strip, crimp or tie a knot with this reusable joiner!
- Follow the 6 easy steps to install both electrifiable or non-conductive coated wire.

Note: You can assemble one wire at a time - see photos to the left - or you can do both wires at the same time as shown in the illustrations below.

Horserail® Products

- Joining Buckle

Other Tools Needed

- Bolt Cutters

Other Related PDF Info Sheets

- Donut Tensioner for Coated Wire - Installation

1 Lace coated wire up through center holes


2 Bend over each end of the coated wire so it is parallel to itself. Looking for 1/2" (12mm) radius bend between wires.

3 Push down through outer holes as much as possible

4 Bend both ends, then trim with small bolt cutters to cut off any surplus

5 Bend both coated wires up toward buckle

6 Final tension the fence - creating a nice, clean and safe join

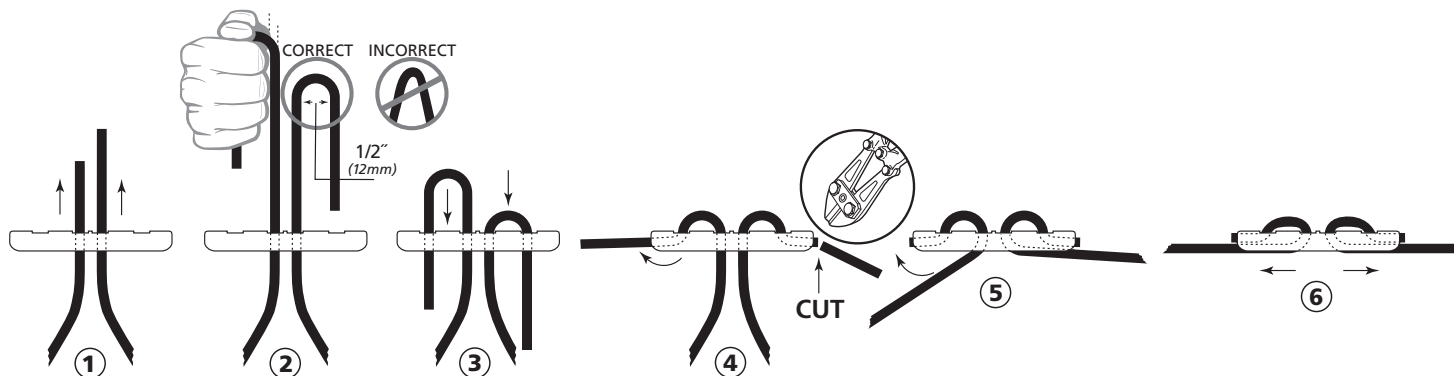

For More Details,
Tips & Techniques
on Building Fences,
Please visit our website:
www.horserail.com


horserail
Just - buckle it up!

