# **TENSIONING SPOOLER**

# Used for Tensioning Horserail®, Hottop® and Hottop®Plus

#### Installing the Convenient Two Piece Spooler

- Place the Spooler on the rail by first holding it up to the rail and then sliding the removable section into the appropriate slot. Keep 12" (305mm) to 18" (457mm) from line post.
- Square the spooler (*with a speed square*) to the rail before tensioning.
  - Use one Spooler for every 660' (200m) of Rail and/or when 90° of elevation and directional change occur.
- Corners, small dips and rises create friction, use one Spooler for every accumulated 90°.
- Make sure rail is hand tight before final tensioning with spooler.
- Must have sufficient slack in rail for one full rotation before becoming taut.
- To make installation and tightening easier and safer, use the Extended Handle Ratchets. Place a ratchet on each Spooler hub.
- Slide on extended handles and remove the safety pin from the rubber strap.
- Tension the rail by first ratcheting the Extended Handles (use the safety pin to hold the tension while ratcheting back) then remove safety pin, repeat ratcheting until taught.
- Two locking pins MUST be placed opposite each other in holes closest to the tensioned rail.
- For best presentation install Spoolers to line up vertically.

Horserail®, Hottop®, Hottop Plus®, Horsecote®, Hotcote®, and Safe-T-Brace Cable® are registered U.S. trademarks of John Wall, Inc

Hardware is **Double Coated for Superior** Weather Resistance: *E-Coat and Powder Coat* 

Please visit horserail.com for a complete list of trademark and patent information


Copyright © 2021 John Wall, Inc. All Rights Reserved.









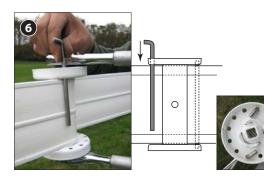



- WARNING: Only for use with low-impedance electric fence energizers!
- Always use an adequate number of electric fence warning signs and make sure to attach them securely.
- It's essential to keep fence line clear of all debris. Please do not burn!



**Extended Handle Ratchets** (Includes Safety Pin) Available in: 2", 4.25", 5.25" & 6.25" (51mm, 108mm, 133mm & 159mm) Match size of rail



horserail.com



## Horserail<sup>®</sup> Product

Tensioning Spooler

Horserail®

- Sizes: 4.25", 5.25" and 6.25" (108mm, 133mm and 159mm)

Hottop<sup>®</sup> & Hottop<sup>®</sup>Plus - Sizes: 4.25<sup>"</sup> and 5.25<sup>"</sup> (108mm and 133mm)

- Match size of rail

- Colors: Brown, Black & White



### **Other Tools Needed**

- Speed Square
- Extended Handle Ratchets

SAFETY FIRST: USE SAFETY EYE GLASSES AND GLOVES.